



Mounting Instructions

Tools you will need:

- Philips screw driver or drill
- Measuring tape
- Level
- Pencil
- Painters tape if desired (not necessary)

Mounting accessories included with your purchase of each your Wall-Décor Panel

Fastening Hardware included

- (2) French aluminum cleat hangers
- (2) #8 plastic anchors
- (2) #8 x 1" screws
- (2) #8 x 1/2" screws
- (4) Bumper Pads

There are two parts to every French cleat hanger set; one cleat hanger must be affixed to the Wall-Décor panel (your panels are already pre drilled with pilot holes) and the other cleat will be installed onto your wall surface.

Hanging your Wall-Décor Panels

Step 1: Identify your desired height/location of the GTA Wall-Décor panel.

If mounting of panels are for a headboard use, headboards are usually hung "just above" the top of the mattress but this is entirely up to you, keep in mind the finished dimension of each individual panel.

Step 2: For your convenience 2 sets of pilot holes have been pre-drilled on your panels. They are located 7" from the top down vertically and 7" from the top down horizontally.

Step 3: Use a measuring tape and a pencil to mark the location of the cleat hanger on the wall.


Step 4: Now use a level to draw a line for the where the cleat hanger will be placed. With a pencil mark 2 dots where the wall anchor holes will be drilled. Drill your anchor holes.

Step 5: With a hammer gently tap in the anchors.

Step 6: Fasten your cleat hangers into the anchors using a Philips screw driver with 1" screws provided. Double check using a level that your cleat hanger is level.

Step 7: It is now time to hang your Wall-Décor Panel.

Step 8: Place one bumper pad in each corner of your panel

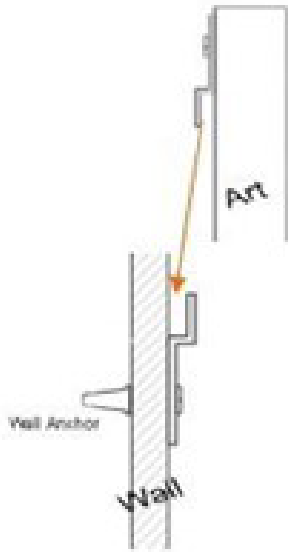

Troubleshooting:

If your Wall Décor panel is up and still not perfectly level

1st – double check your cleat hanger on the wall to make sure it is level.

2nd – make adjustments to the cleat hanger on your Wall Décor panel by losing the screws and re-adjusting the hanger.

When hanging multiple Wall Décor panels.

Follow steps 1 through 6.

Make sure to draw a level line to include the location of all desired Wall Décor panels and cleat hanger(s).

When mounting the Wall Décor panels vertically measure from your cleat hanger the width of the panel across plus 1" for every inch of spacing you wish to have between panels.

When mounting horizontally measure from your cleat hanger the length of the panel plus 1" for every inch of spacing between panels.

